

**WARNING:****Please read before installing the stem!**

When you ride beyond your limits, cycling can be dangerous. Take a good look at the trails before you shred them, and don't just follow an idiot. You should read our instructions carefully before assembly. **FAILURE TO FOLLOW** these instructions before installing and using Ambit components can result in long, boring bike breaks and serious injury or death.

**WARRANTY**

All Ambit parts are warranted for two years from the date of purchase against material defects and manufacturer workmanship. Warranty claims will require an original invoice and will be handled through a specialist dealer or Sport Import. The warranty does not apply to damage caused by riding outside of normal conditions and/or by misuse or failure to follow these instructions for use. Your statutory rights are not affected by this warranty.

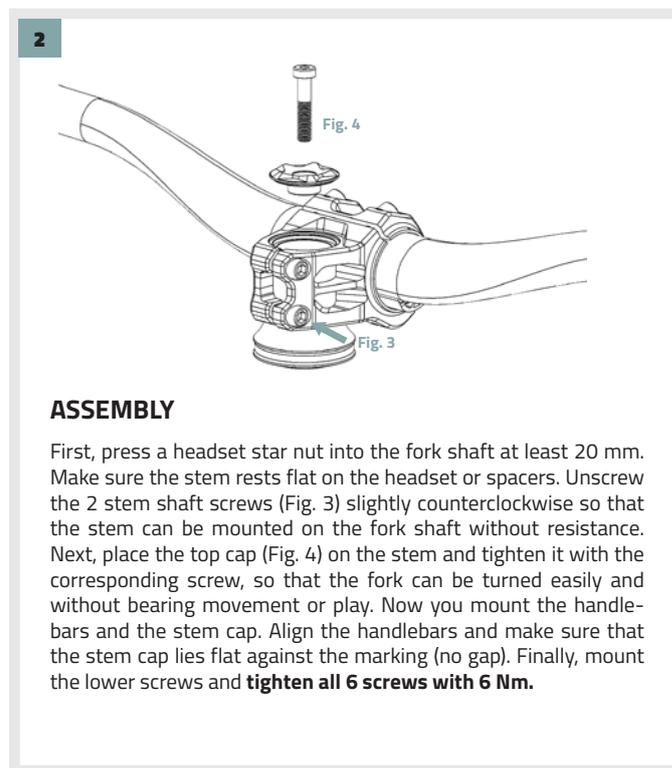
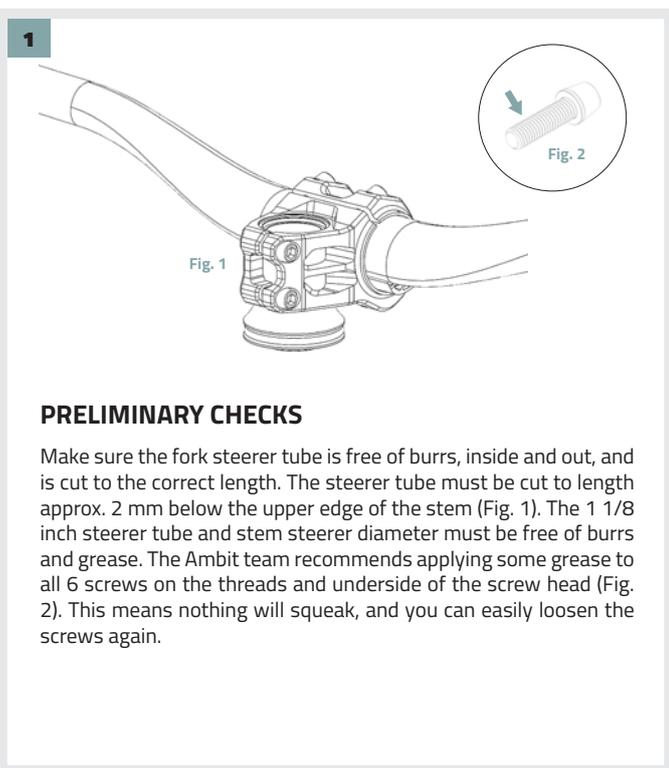
**PACKAGE CONTENTS**

Stem + Top Cap

6x screws (M5x20mm)

**TOOLS REQUIRED**

To attach the stem you will need a 4mm Hex key and a torque wrench.

**NOTE:** Do not use a ball-end Hex wrench. This just makes everything worse.**MAINTENANCE + TIPS**

Check the stem carefully for signs of damage before every ride. Check to ensure all screws are tightened to 6 Nm with a torque wrench. The stem must not have any noticeable play or movement on the fork steerer. If the stem is damaged, please visit your specialist retailer or send the stem to Sport Import Service, Industriestrasse 39, 26188 Edewecht, Germany.

Only use original Ambit spare parts to replace the M5x20mm screws.

- 1 Hex key M5x20mm
- 2 Gravity Control® Stem Body 35mm  
Gravity Control® Stem Body 40mm  
Gravity Control® Stem Body 45mm
- 3 Gravity Control® Stem Front Cap

